


DUMP-LOK 105-106

INSTALLATION INSTRUCTIONS

1. With wheels chocked and empty dump bed raised to the appropriate height, set driver side (left) DUMP-LOK on truck frame, pushing firmly so the top and bottom plates are making full contact with both frames.



2. Place safety chain around truck frame or frame cross member. Slide chain through key slot hole. Tighten and lock chain in the small end of the slot. Repeat procedure for passenger side.

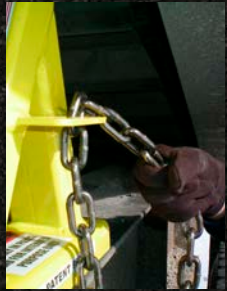

3. Slowly and carefully lower the dump bed to secure DUMP-LOK.



**DO NOT
"POWER DOWN"
THE DUMPBOX!**

BLUERIBBON
SAFETY

DUMP-LOK.COM